

## AK2000 C Camera Compatibility List (Cable Control)

Brand	Camera list	Control cable	Function	Setting notes on Camera/Lens	Camera version	HUB Firmware
Sony	α6300	Type-C to Multi	1. Take photos 2. Start/Stop recording video 3. Half-press to focus 4. Switch photo/video	1. Please turn on the gimbal, and then plug in the cable. 2. Users can use Sony Type C to Multi cable to control SONY cameras, but cannot charge it, and Type-c to micro (A03) is available to charge the camera	2.00	AK2000c_HUB_V104
	α6400				1.00	
	α6500				2.00	
	α6100				1.00	
	α6600				1.00	
	α7R IV				1.00	
	α7R III				3.01	
	α7 III(A7M3)				3.00	
	α7SII				2.00	
	α7RII				4.00	
	α7II				4.00	
	α7R				2.00	
	α9				6.00	
RX100 IV(RX100M4)	1.30					
RX100 VII(RX100M7)	1.00					
Canon	M50	Type-c to micro (A03)	1. Take photos 2. Start/Stop recording video	---	1.0.0	AK2000c_HUB_V104
	EOS R	Type-c to TypeC (C02)	1. Take photos 2. Start/Stop recording video		1.0.0	
	M6 mark II		1.0.0			
	G7X mark III	Type-c to TypeC (C02)	1. Take photos 2. Start/Stop recording video	Please turn off the WIFI connection for Cable control.	1.0.1	
	EOS 200D II	Type-c to micro (A03)	1. Take photos 2. Start/Stop recording video 3. Switch photo/video	---	1.0.0	
	EOS 90D	1.0.0				
	80D	Type-c to mini ( B02) (not a standard cable)	1. Take photos 2. Start/Stop recording video	---	1.0.2	
	6D				1.3.5	
	5D MarkIII				1.0.3	
6D MarkII	1.0.3					
Panasonic	GH5s	Type-c to Type-c (C02)	1. Take photos 2. Start/Stop recording video	1. USB mode choose PC(Tether) 2. WiFi and USB cable control cannot be used simultaneously	1.2	AK2000c_HUB_V104
	GH4	Panasonic Shutter Cable Type C to DC2.5	1. Take photos 2. Start/Stop recording video	To control recording, you need to turn the camera to video mode .	2.7	
	G9				2.0	
Nikon	Z7	Type-c to TypeC (C02)	1. Take photos 2. Start/Stop recording video	1. After turning on the camera, it takes a few seconds for the camera to connect successfully 2. Make sure the camera live view function is on when using the gimbal control function (LV) 3. To control recording, you need to turn the camera to video mode .	1.00	AK2000c_HUB_V104
	Z6				2.00	
	D7500	Type-c to micro (A03)			1. After turning on the camera, it takes a few seconds for the camera to connect successfully 2. Make sure the camera live view function is on when using the gimbal control function (LV) 3. To control recording, you need to turn the camera to video mode . 4. The camera only has the light indicator and the screen does not display the duration during recording	
Fujifilm	X-T200	Type-C to TRS3.5(T03) (not a standard cable)	1. Take photos 2. Start/Stop recording video 3. Half-press to focus	1. Please set up "MIC/REMOTEO RELEASE "to REMOTE , Steps: Press Menu , Video Setting } MIC/REMOTEO RELEASE } REMOTE 2. To control recording, you need to turn the camera to video mode .	1.00	AK2000c_HUB_V104
	X-T30	Type-C to TRS2.5 (T02)			1.00	
	X-T20				2.01	
	x-T4				1.00	
	X-A5				2.00	
	X-T100				2.00	
	X-H1				2.01	
	X-T3				3.01	